

Required Tools:

13mm, 15mm, and 1/2 in. Socket and Ratchet.

13mm and 1/2 in. Wrench.

Hydraulic Floor Jack and Jack Stands.


Installation Instructions:

1. Lift vehicle and support with jack stands.
2. Using a 15mm socket remove the 2 transmission mount fasteners.
3. Support the transmission with a hydraulic floor jack.
4. Using a 13mm socket you can now remove the 4 transmission crossmember bolts and the stock transmission crossmember.
5. Install your Petty's Garage Transmission Crossmember with the 4 supplied bolts and 2 factory fasteners . Once all the hardware is started, torque hardware to 45 ft/lbs.
6. Using the 4 bolts supplied you can now install the loop over the driveshaft, torque to 35 ft/lbs.
7. Lower Vehicle.

Manual Transmission Crossmember With Loop Part # PG-TC-DL-001



Performance Vehicles Since 1949

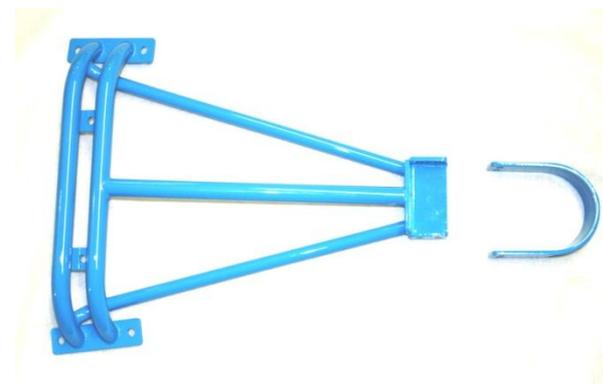

Final Installation with a Petty's Garage Manual Transmission Crossmember with Loop

Petty's Garage

www.pettys-garage.com

336-495-6651