

Automatic Transmission Driveshaft Loop

Part # DL-002

Required Tools:

- 10 mm, 13 mm & 15mm Socket and Ratchet
- 13 mm wrench
- Hydraulic Floor Jack and Jack Stands

Installation Instructions:

1. Lift vehicle and support with jack stands.
2. Using a 15mm socket remove the 2 transmission mount bolts.
3. Support the transmission with a hydraulic floor jack.
4. Using a 13mm socket you can now remove the 4 transmission crossmember bolts and transmission crossmember.
5. Using a 13mm socket separate the transmission mount from the transmission .
6. Using a 10mm socket install driveshaft loop base plate with 4 bolts provided, tabs pointed up towards the floorpan, torque to 35 ft/lbs.
7. Using the 4 bolts supplied you can now install the loop over the driveshaft, torque to 35 ft/lbs.
8. Re-install your transmission crossmember with supplied spacers between crossmember and floorpan. Once all bolts are started, torque them to 45 ft/lbs.
9. Lower Vehicle.



Performance Vehicles Since 1949



**Final Installation with a Petty's
Garage Transmission Crossmember**

Petty's Garage

partsinfo@pettys-garage.com