

BBK PERFORMANCE LLC
3060 Performance Circle
Deland, FL 32724

For any questions, email us:
TECH@BBKPERFORMANCE.COM



INSTALLATION INSTRUCTIONS - INS198

AXLE BACK SYSTEM

Part # 4100 and 41005 // 2005-2010 Ford Mustang GT

Part# 4101 and 41015 // 2011-2014 Ford Mustang GT



Special Tools required: Impact or Ratchet, Pry Bar



Install Time: Approximately 2-3 hours.



Difficulty: Average.



MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

HARDWARE INCLUDED

Inlet Tubes (2pcs)
4102B- Muffler Tips
Muffler (2pcs)

KIT4101/5 SCP-248-275 2-3/4" Band Clamp (2pcs)
SCP-248-300 3" Band Clamp (2pcs)

KIT4100/5 SCP-248-250 2-1/2" Band Clamp (2pcs) / SCP-248-275
2-3/4" Band Clamp (2pcs) / SCP-248-300 3" Band Clamp (2pcs)/
Stainless steel kits come with SCP-275-### clamps.

INSTALLATION

STEP 1

Lift and support the vehicle.

STEP 2



Starting on the driver side, loosen the clamps at the mufflers and mid pipes.

STEP 3



Using a pry bar or grommet removal tool, remove the rubber grommet located by the muffler tip from the muffler hanger.

STEP 4



Twist the mid pipe so the muffler has enough clearance to be removed.

 **MADE IN U.S.A.** 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 5



Slide the muffler towards the front of the vehicle and remove.

STEP 6



ONLY FOR 2011-14 MUSTANG GT

NOTE!! On 2011-2013 Models you will need to remove the factory clamp from the stock muffler to use on the inlet tube for the BBK Axle Back System. The clamp has a very small and brittle tack weld on it only for the factory production line use. Its easily removed by cutting or wiggling the clamp back and forth until it breaks off the stock muffler.

STEP 7

Repeat steps 2-6 for the passenger side.

STEP 8



Starting on the driver side, slide the inlet pipe through the 2 hanger grommets and into the mid pipe and snug the clamp to hold the tubing in place.

STEP 9



Slide the muffler over the inlet pipe, then slide the grommet closest to the rear bumper onto the muffler hanger.

 **MADE IN U.S.A.** 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 10



Slide and snug the exhaust tip onto the outlet tube of the muffler.

STEP 11



Repeat steps 8-10 for the passenger side

STEP 12



With all the clamps snug, make any fitment adjustments starting at the front clamps on the mid pipe and ending at the muffler tips, then tighten.

2011 - 2013 MUSTANG GT DYNO RESULTS

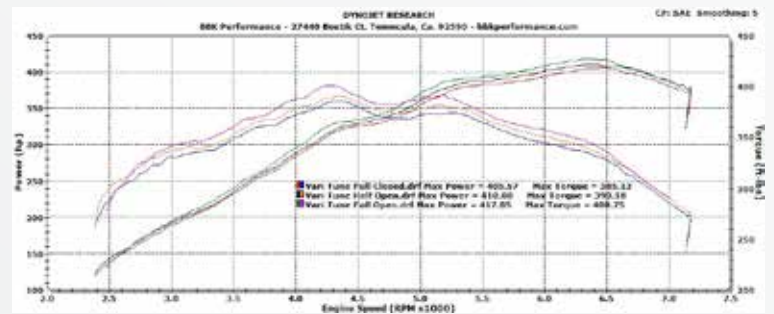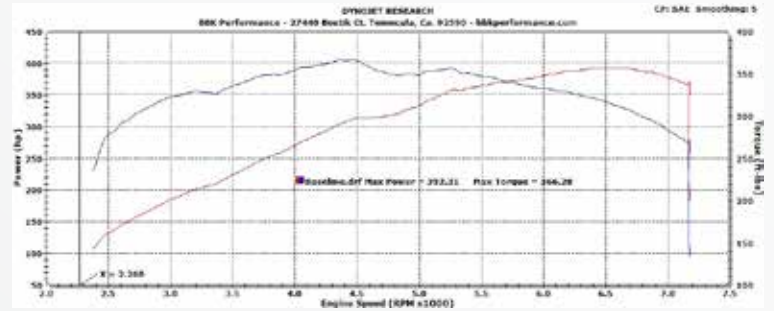

MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

