




# INSTALLATION INSTRUCTIONS

## Part # PG-RSTB-003 - Rear Strut Tower Brace

### COMPONENTS:

QTY	DESCRIPTION
4	M10 NYLON LOCKING NUTS
4	SPECIALTY WASHERS
1	TEMPLATE "B"
1	TEMPLATE "C"
1	TEMPLATE "D"
1	2" PETTY'S GARAGE DECAL

### RECOMMENDED TOOLS:

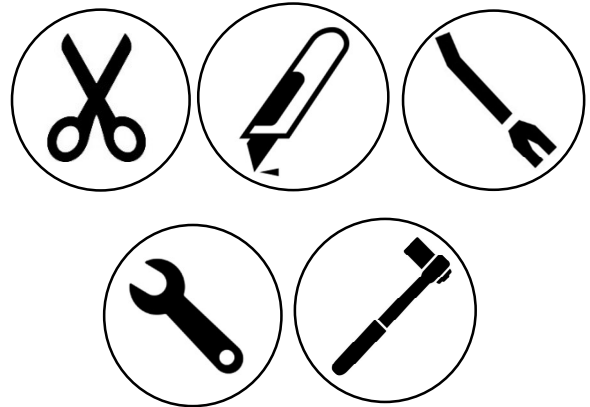

SCISSORS, BOX CUTTER, CLIP REMOVAL TOOL, WRENCH & TORQUE WRENCH

### INSTRUCTIONS:

**Step 1:** Fold both rear seats forward to gain access. Remove trunk floor mat and trunk side panels held in place by plastic push pins. Use a clip removal tool for easier removal of pins.

**Step 2:** Carefully install rear strut tower brace over the existing strut tower studs.





## ***INSTALLATION INSTRUCTIONS***

**Step 3:** Install 4 cup retainers and nuts on shock studs. Torque rear shock tower nuts to 35 ft/lbs.

**Step 4:** Using the appropriate Challenger or Charger template, fit the side template on the side panel indentions, cut a hole, and slit out the panel.



**Step 5:** Reinstall trunk side panels and floor mat.

