



INSTALLATION INSTRUCTIONS

Part # PG-STB-002 - Single Strut Tower Brace


COMPONENTS:

QTY	DESCRIPTION
1	Strut Tower Brace
1	2" Petty's Garage Decal

FITMENT:

2008-2020 Dodge Challenger/Charger
5.7L & 6.4L (Non-Shaker Hood)

RECOMMENDED TOOLS:

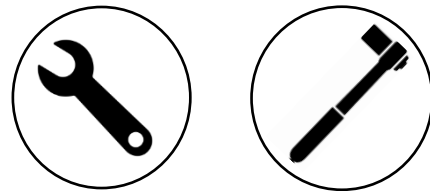

13MM WRENCH & TORQUE WRENCH

INSTRUCTIONS

Step 1: Remove left and right shock mount covers (Fig. 1), using a trim removal tool (if necessary)

**Note: There is a recessed area to make removal easier (Fig. 2)*

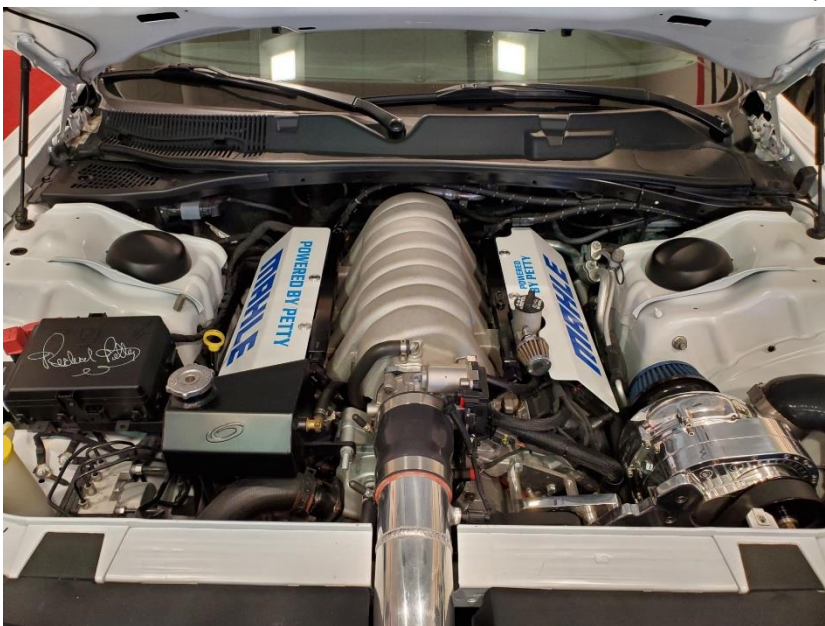


Figure 1

Figure 2



INSTALLATION INSTRUCTIONS

Step 2: Using a 13mm socket (deep well may be needed) remove the six (6) upper strut mounting nuts, three (3) per side (Fig. 3)

Step 3: Install brace and reinstall fasteners (Fig. 4)
Torque to 20 ft/lbs

Note: Some instances will require raising one side of the vehicle to allow proper alignment of the studs through the holes of the strut bar



Figure 4

Step 4: Reinstall factory strut tower covers (if desired)



Figure 3

Note: PG-STB-002 will fit Magnuson 2300TVS Superchargers (Use PG-STB-005 for Whipple 2.9L Superchargers, and PG-STB-010 for Edelbrock Superchargers)