

# Automatic Transmission Crossmember

## Part # TC-003




*Performance Vehicles Since 1949*

### Required Tools:

- 13 mm & 15mm Socket and Ratchet
- Hydraulic Floor Jack and Jack Stands

### Installation Instructions:

1. Lift vehicle and support with jack stands.
2. Using a 15mm socket remove the 2 transmission mount bolts.
3. Support the transmission with a hydraulic floor jack.
4. Using a 13mm socket you can now remove the 4 transmission crossmember bolts and the stock transmission crossmember.
5. Install your Petty's Garage Transmission Crossmember with the 6 supplied bolts. Once all bolts are started, torque them to 45 ft/lbs.
6. Lower Vehicle.

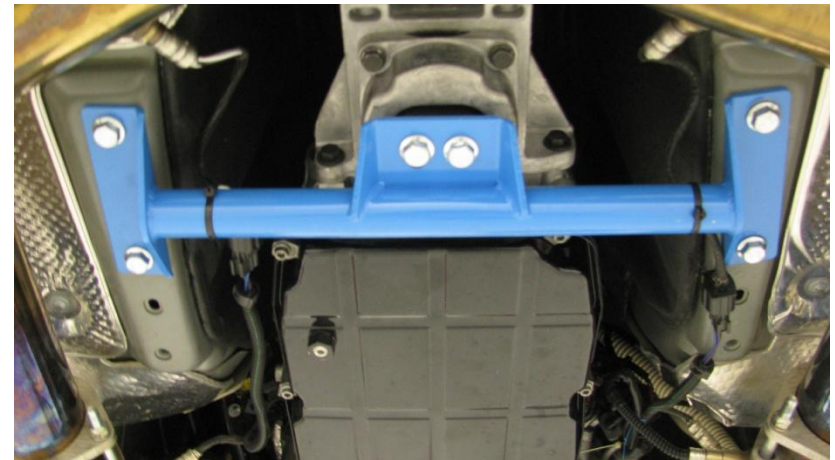

**Final Installation**

Petty's Garage  
336-495-6651  
[www.pettys-garage.com](http://www.pettys-garage.com)